



Support mesh for slatted base

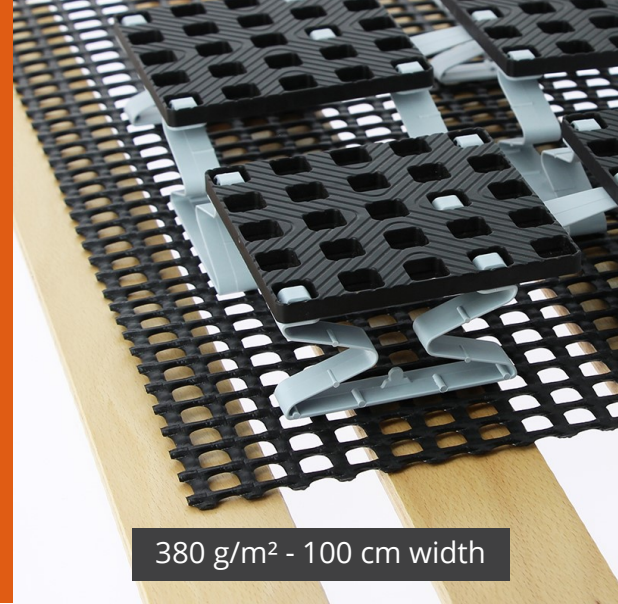


380 g/m² - 100 cm width

YOU HAVE A SLATTED BASE AND WANT TO INSTALL MODULOFLEX ?
USE OUR SUPPORT MESH

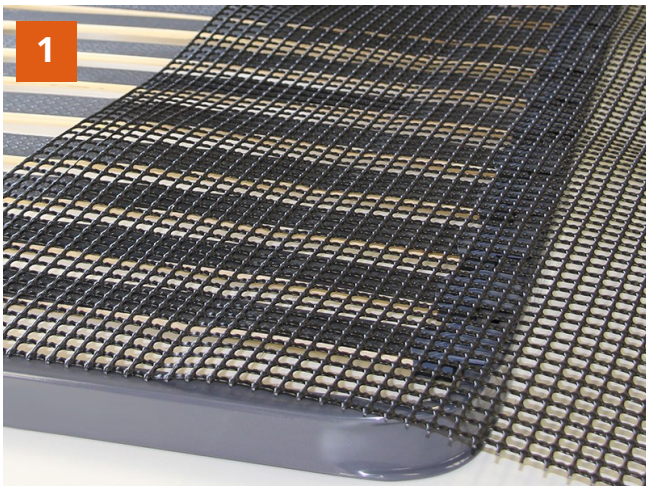


1

Place the mesh on your bed frame
or take the measurements

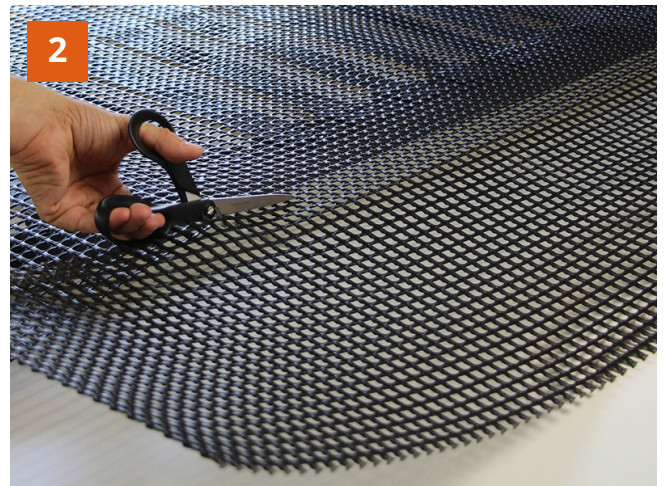

2

Cut to size

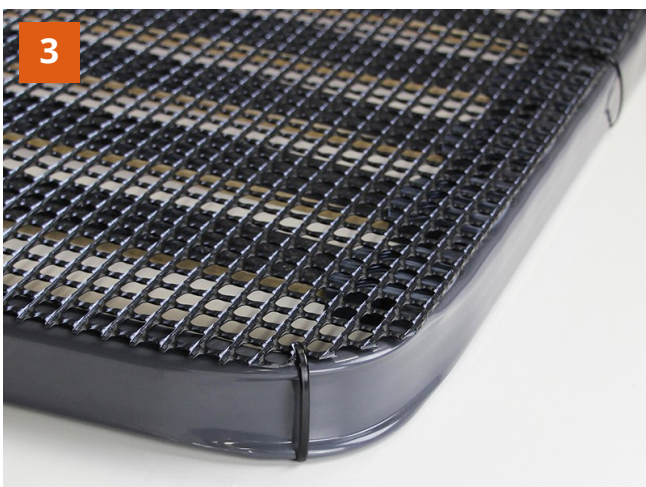

3

Fasten the mesh to the bed frame
(cable ties not supplied)



4

Place MODULOFLEX over it
(if needed, tie it to the mesh)